

Project ChildSafe™ Gun Lock Installation Instructions

REMEMBER: No firearm's safety or lock can be a substitute for safe, careful gun handling and storage. This lock is intended to discourage unauthorized access to a firearm, particularly by young children. This lock may be defeated by a determined individual using tools or other aggressive means and may not prevent intentional misuse of a firearm.

Warning: Before installing this or any gun lock, be sure the firearm is completely **UNLOADED** and the safety is on **SAFE**. When installing the lock, keep your finger off the trigger and always have the firearm pointing in a safe direction.

Below are examples of lock installation procedures on common firearm actions.

Autoloading Pistols




With the slide locked back and magazine removed, insert the cable through the ejection port and out the magazine well. Insert cable end into padlock and lock. Check that cable is secure.

Revolvers



With the cylinder open, insert the cable through the barrel, or through an empty cylinder chamber. Insert cable end into padlock and lock. Check that cable is secure.

Autoloading and pump-action shotguns

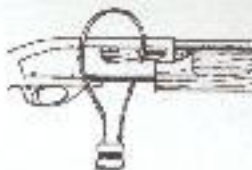

With the bolt in the locked open position, insert the cable through the ejection port and out the loading port. Insert cable end into padlock and lock. Check that cable is secure.

Bolt Action Rifles



Open the action (lock it open if your firearm has a bolt hold-open device) and remove the magazine. Insert the cable through the ejection port and out the magazine well. Insert cable end into padlock and lock. Check that cable is secure.

OR

Remove the bolt from the rifle. Insert the cable through the ejection port and out through the end of the receiver assembly. Insert cable end into padlock and lock. Check that cable is secure.

Review installation instructions that accompany the locks delivered to your department.